

# ICAR PLUS Rheometer

- **ICAR PLUS Rheometer**

**RHM-5000**

- Includes:
- 1 Motor drive/torque meter unit (RHM-5001)
  - 1 Power cord for motor drive/torque meter unit (RHM-5002)
  - 1 Base plate for attaching motor drive/torque meter unit to container (RHM-5003)
  - 1 Container for 19 mm NMSA aggregate, standard size (RHM-5005)
  - 1 Four-blade vane for 19 mm NMSA aggregate (RHM-5009)
  - 1 USB cable to connect motor drive/torque meter unit to computer (RHM-5012)
  - 1 Laptop computer with installed software (RHM-5013)
  - 1 Software on CD-ROM (RHM-5014)
  - 1 User manual (RHM-5015)
  - 1 Carrying case for laptop computer (RHM-5016)
  - 1 Carrying case for Rheometer and accessories (RHM-5017)

**Note:** Vane is 127 mm in height and diameter, overall length depends on NMSA (see below for other sizes).

***Spare Parts/Consumables:***

- **Silicone oil for verification of instrument**

**RHM-5018**

***Container's dimensions according Nominal Maximum size of aggregate:***

- **For 12.5 mm NMSA: Diameter 280 mm, height 280 mm**
- **For 19.0 mm NMSA: Diameter 305 mm, height 312 mm**
- **For 25.0 mm NMSA: Diameter 355 mm, height 380 mm**
- **For 32.0 mm NMSA: Diameter 405 mm, height 460 mm**

**RHM-3004**

**RHM-3005**

**RHM-3006**

**RHM-3007**

***Vane's overall length according Nominal Maximum size of aggregate:***

- **For 12.5 mm NMSA: Overall length 235 mm**
- **For 19.0 mm NMSA: Overall length 240 mm**
- **For 25.0 mm NMSA: Overall length 290 mm**
- **For 32.0 mm NMSA: Overall length 330 mm**

**RHM-3008**

**RHM-3009**

**RHM-3010**

**RHM-3011**